INSTRUCTION BOOK

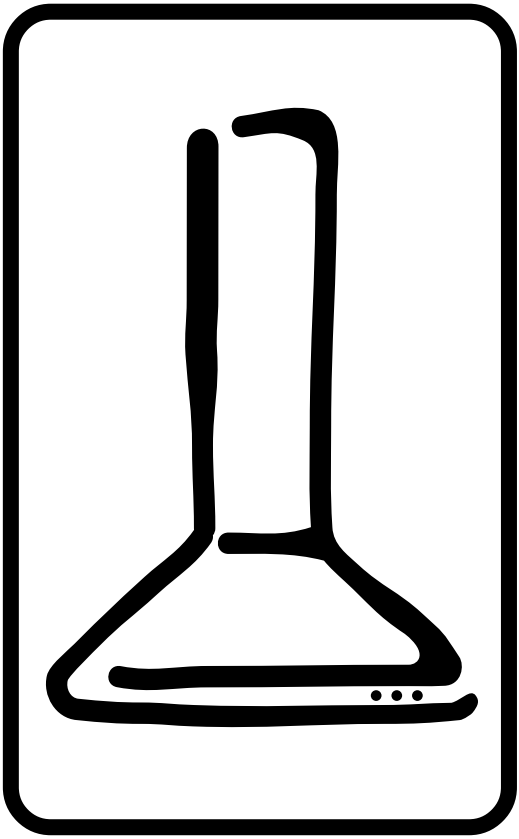

COOKER HOOD

MCH 665

Thank you for buying an Moffat product.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information on Moffat Products, please contact our Customer Care Department.

Customer Care Department
Moffat
55 -77 High Street
Slough
Berkshire
SL1 1DZ
Tel:08705 950 950
* calls to this number may be recorded for training purposes.

To register ownership, please ensure you complete and return the guarantee card supplied with the appliance.

For the User

Important Safety Information

Your Appliance

Operating Instructions
The Controls
To Operate
Extraction
Recirculation

Maintenance and Cleaning
External Cleaning
Metal Grease Filter
Removing the Metal Grease Filter
Charcoal Filter (Optional Extra)
To Remove/Replace the Charcoal Filter
Changing the Light Bulb

Something Not Working

Service and Spare Parts

Guarantee Conditions

For the Installer

Installation Instructions
Technical Information

Electrical Connections
Electrical Requirements
Electrical Connection

Installing the Cooker Hood
Installation Requirements
Ducting
Clearance Height
Unpacking
Wall Fitting
Venting
To Fit the Ducting
Recirculation
Fitting the Cooker Hood to the Wall

Guide to use the instruction book

The following Symbols will be found in the text to guide you through the instruction book

Safety instructions

 Step by step instructions

IMPORTANT SAFETY INFORMATION

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Care Department.

■ Installation

- Any installation work must be undertaken by a qualified electrician or a competent person.
- This hood must be installed in accordance with the installation instructions and all measurements must be adhered to.
- If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety Codes of Practice BS. 6172, BS. 5440 and BS. 6891 (Natural Gas)and BS. 5482 (LP Gas)1994, the Gas Safety (Installation &Use)Regulations, the Building Regulations issued by the Department of the Environment, the Building standards (Scotland) (Consolidated)Regulations issued by the Scottish Development Department.
- The fan motor of this cooker hood incorporates a cut-out device which will operate if the cooker hood is installed below the minimum height recommended under section 'Clearance Height ', or if the motor becomes overheated. If the cut-out device is activated, switch off the fan motor and allow the cooker hood to cool. The cut-out device will reset itself when the fan motor has cooled significantly.
- It is dangerous to alter the specifications or modify this product in any way.
- When installed between adjoining wall cabinets the wall cabinets must not overhang the hob.
- If the room where the hood is to be used contains a fuel burning appliance such as a central heating boiler then its flue must be of the room sealed or balanced flue type.
- If other types of flue or appliances are fitted ensure that there is an adequate supply of air to the room.
- The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose.
- Do not install above a cooker with a high level grill.

■ Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.

■ During Use

- This product is for domestic use only.
- Never leave frying pans unattended during use as over-heated fats and oils might catch fire.
- Never do flambé cooking under this cooker hood.
- Do not leave naked flames under the hood.

■ Maintenance and Service

- This appliance can be a hazard if the synthetic paper and charcoal filters are not replaced as recommended.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunction. Refer to your local Service Force Centre. Always insist on genuine spare parts.

YOUR APPLIANCE

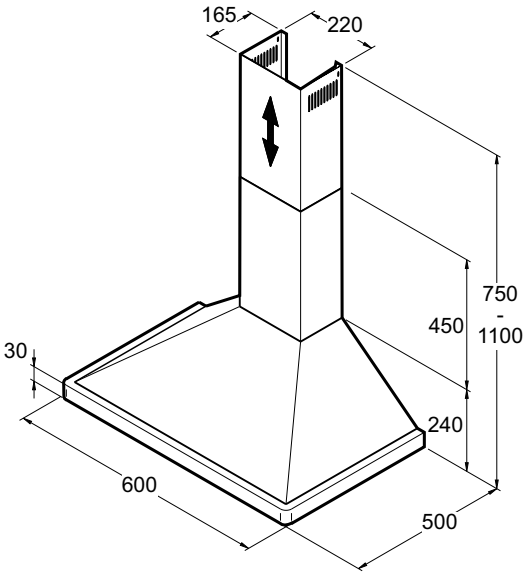

OPERATING INSTRUCTIONS

This cooker hood is designed to extract unpleasant odours from the kitchen, it will not extract steam.

To obtain the best performance it is advisable to switch on the hood a few minutes before you start cooking and leave it running for approximately 15 minutes after finishing.

The cooker hood controls are located at the front near the grease filters and the lamp covers.

The Controls

Fan ON/OFF/Speed Control

- -Off
- -Low
- -Normal
- -Boost

Light ON/OFF control

- -Off
- -On

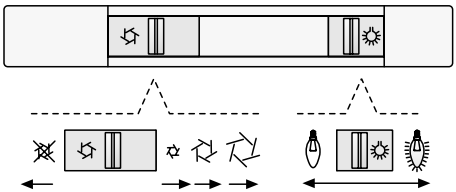

To Operate

Select the required fan speed and light if required.

- The hood is supplied as an extractor unit and can also be used with a filtering function by fitting one charcoal filter.
- You will need two original charcoal filters for this function (Available from your local Service Force Centre).

Extraction

In the extraction mode contaminated air enters the cooker hood, passes through the grease filter and out through the ducting into the atmosphere.

Never do flambé cooking under this cooker hood.

Take extra care when frying and never leave frying pans unattended during use as overheated fats and oils might catch fire.

Do not leave naked flames under the cooker hood.

Ensure heating areas on your hob are covered with pots and pans when using the hob and cooker hood simultaneously.

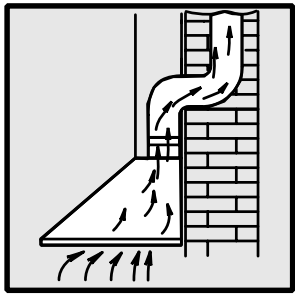

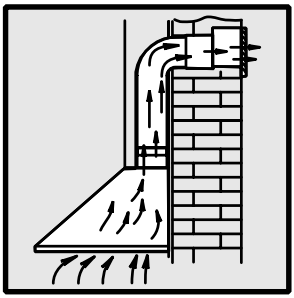

Recirculation

In the recirculation mode contaminated air is passed through the charcoal filters to be purified and recirculated into the kitchen through the recirculation grilles.
You will need two original charcoal filters for this function (Available from your local Service Force Centre).

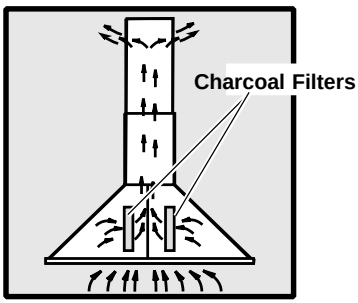

MAINTENANCE AND CLEANING

Before carrying out any maintenance or cleaning isolate the cooker hood from the mains supply.

The cooker hood must be kept clean, a build up of grease or fat can be a fire hazard.

External Cleaning

Wipe the cooker hood frequently with warm soapy water using a mild detergent.

Always wear protective gloves when cleaning the hood.

Never use scouring pads or abrasive cleaners.

Never use excessive amounts of water when cleaning particularly around the control panel.

Metal grease filter

The purpose of the grease filters is to absorb grease particles which form during cooking and it **must** always be used, either in the external extraction or internal recirculation function.
Attention: the metal grease filters must be removed and washed, either by hand or in the dishwasher, every four weeks.

Removing the metal grease filter

- Push it towards the back of the unit and then pull it down and out, the grille will open from the front.

Hand washing

Soak grease filters for about one hour in hot water with a little washing-up liquid added, then rinse off thoroughly with hot water. Repeat the process if necessary. Refit the grease filters when they are dry.

Dishwasher

Place grease filters in the dishwasher. Select most powerful washing programme and highest temperature, at least 65°C. Repeat the process. Refit the grease filters when they are dry.

When washing the metal grease filter in the dishwasher a slight discolouration of the filter can occur, this does not have any impact on its performance.

- Clean the inner housing using a hot detergent solution only (never use caustic detergents, abrasive powders or brushes).

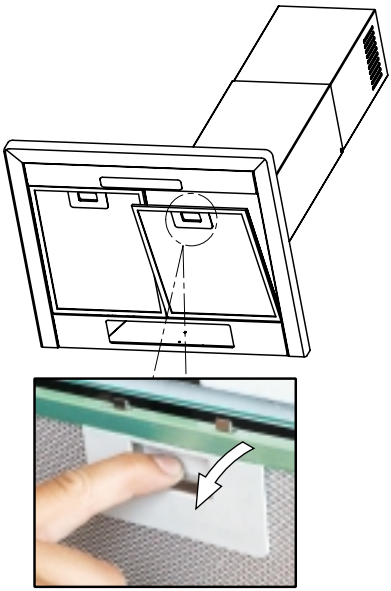

Charcoal Filter

The charcoal filter cannot be cleaned.
The filter should be replaced at least every three months or more frequently if the hood is used more than three hours per day.

To Remove/Replace the Charcoal Filter

1. Remove the metal inlet grille.
2. Carefully turn the charcoal filters anti-clockwise and remove them from the two sides of the motor housing.
3. Place the new charcoal filters over the sides of the motor housing, and turn clockwise.

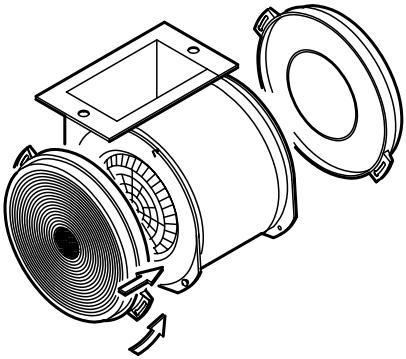

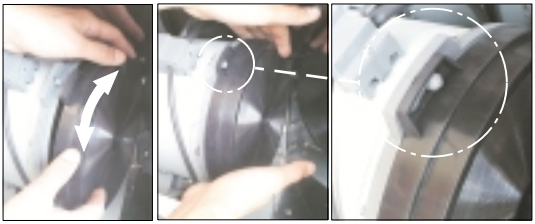

Changing the Light Bulb

If the light bulb fails to function check that the bulb is screwed into the holder.
If bulb failure has occurred then it should be replaced with a 220-240V 40W clear cylindrical shape bulb with a small E14 screw thread.

Charcoal filters and light bulbs can be obtained from your local Service Force Centre.

This appliance can be a fire hazard if the grease and charcoal filters are not replaced as recommended.

SOMETHING NOT WORKING

If your appliance fails to work properly please carry out the following checks.

Symptom	Solution
The cooker hood will not start. . .	Check that: The hood is connected to the electricity supply. Check that a fan speed has been selected
The cooker hood is not working effectively. .	Check that: The fan speed is set high enough for the task. The grease filters are clean. The kitchen is adequately vented to allow the entry of fresh air. If set up for recirculation, check that the charcoal filter is still effective. If set up for extraction, check that the ducting and outlets are not blocked.
The cooker hood has switched off during operation. . .	The safety cut-out device has been tripped. Turn off the hob and then wait for the device to reset. If the hood has been installed below the heights indicated in the installation instructions the motor will cut-out frequently which will damage the hood.

If after all these checks, the problem persists, contact your local Service Force Centre, quoting the model and serial number.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

SERVICE AND SPARE PARTS

If you require an engineer or spare parts contact your local Service Force Centre by telephoning:

08705 929929

Your telephone call will be routed to your local Service Force Centre.
For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk

Moffat has an agreement with Electrolux who will undertake all servicing requirements for your appliance.

For general assistance with your appliance or for further information on Moffat products please contact our Customer Care Department.

Customer Care Department,
Moffat
55 -77 High Street
Slough
Berkshire
SL1 1DZ

Tel: 08705 950 950*

* calls to this number may be recorded for training purposes.

GUARANTEE CONDITIONS

We, Moffat, undertake that if within twelve months of the date of the purchase this Moffat built-in appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer 's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by an Electrolux Service Force Centre.
- Any appliance or defective part replaced shall become the property of this company.

Home visits are made between 8. 30am and 5. 30pm Monday to Friday . Visits may be available outside these hours in which case a premium will be charged.

EXCLUSIONS

This Guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right appliances improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- Products of Moffat manufacture which are not marked by Moffat.

This guarantee is in addition to your statutory and legal rights.

ELECTROLUX EUROPEAN GUARANTEE

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC)or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i. e. a normal household.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 22 22
Germany	Nurnberg	+49 (0)911 323 2600
Italy	Pordenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0)20 78 77 50
UK	Slough	+44 (0)1753 219 898

INSTALLATION INSTRUCTION

It is dangerous to alter the specifications or attempt to modify this product in any way.

Technical Information

DIMENSIONS	HEIGHT:	750-1100mm
	WIDTH:	600mm
	DEPTH:	500mm
WEIGHT	GROSS:	10, 9 kg
	NET:	8, 8 kg
ELECTRICAL SUPPLY:	Voltage (50Hz)	240 V
POWER CONSUMPTION:		240 W
FAN MOTOR:		160 W
LAMP:		2 x 40W
SUITABLE FOR INSTALLATION ABOVE:	ELECTRIC HOB:	7KW (max)
	GAS HOB:	10KW (max)
	SLOT-IN GAS COOKER	13. 5KW (max)
	SLOT-IN ELECTRIC COOKER	12. 4KW (max)

CE

Note:CE Marking certifies that this appliance complies with the requirements laid down in EEC directive 89:336. (Electromagnetic compatibility)and subsequent modifications and Low Voltage directive 72/23/E.

ELECTRICAL CONNECTIONS

WARNING:DOUBLE INSULATED
DO NOT EARTH

Electrical Requirements

Any permanent electrical installation must comply with the latest I. E. E. Regulations and local Electricity Board regulations. For your own safety this should be undertaken by a qualified electrician e. g. your local Electricity Board, or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC).

Electrical Connection

Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

This appliance is fitted with a 2 core mains cable and must be permanently connected to the electricity supply via a double-pole switch having 3mm minimum contact gap on each pole. A Switched Fuse Connection Unit to BS. 1363 Part 4, fitted with a 3 A fuse is a recommended mains supply connection accessory to ensure compliance with the Safety Requirements applicable to fixed wiring instructions.

This appliance conforms to BS. 800:1988 and EEC Directive No. 78 308 regarding suppression of radio and television interference.

INSTALLING THE COOKER HOOD

Please ensure that when the appliance is installed it is easily accessible to an engineer in the event of a breakdown.

All installations must comply with the local authorities requirements for the discharge of exhaust air.

Incorrect installation may affect the safety of this cooker hood.

Installation Requirements

Before installation check the wall to which the cooker hood is to be fitted for electric cables, water or gas pipes.

If it is necessary to fix the hood to a hollow construction plaster or partition board structure then it should be sufficiently reinforced to be quite rigid in the area of the cooker hood keyhole fixing screws, and the appropriate rawl plugs used for this type of fixing (not supplied).

Ducting

The ducting must be fire retardant 125mm (5ins) in diameter and the length should be no more than:
3 metres with one 90 ° bend
2 metres with two 90 ° bends
Bends of more than 90 ° will reduce the efficiency of the hood and reduce the airflow.

Clearance Height

The cooker hood is designed to be fitted over a cooking appliance at the clearance heights stated, providing the maximum output of the appliance beneath does not exceed the maximums quoted in the Technical Specifications.
If the output of the appliance below the cooker hood exceeds the maximum output quoted, please refer to the cooker manufacturer 's installation instructions.

Clearance Height

A minimum clearance height of 700mm (27 1/2 ”) is required when installed above an electric hob, or 750mm (29 1/2 ”) when installed above a gas hob.

When installed between adjoining wall cabinets, the wall cabinets must not overhang the hob and the distance between the underside of the cabinet and the worktop must be 450mm. If the height of the wall cabinet is less than 450mm a gap of 50mm must be maintained either side of the hob.

This cooker hood must not be installed above a cooking appliance with a high level grill.

The hood can be installed above these heights but for optimum performance it should be installed at the distance quoted for the appropriate heat source.

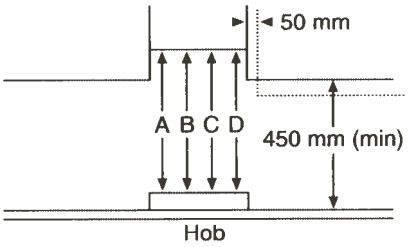

A: Built-in Electric Hob:	700mm minimum clearance
B: Built-in Gas hob:	750mm minimum clearance
C: Slot-in Electric Cooker:	735mm minimum clearance
D: Slot-in Gas Cooker:	837mm minimum clearance

Unpacking

The fittings supplied to install this cooker hood can be found with the instruction book inside the packaging and consists of the following:

1 chimney support
1 Connection ring Ø 123
16 screw covers
6 Plastic rawl plugs Ø 6 mm
6 Screws 3, 9x32
6 Screws 3, 5x9, 5

Fitting the cooker hood to the wall

- Decide where the cooker hood is to be installed, using a pencil mark the 4 points on the wall corresponding to 2 upper fixing points and 2 lower fixing points, ensuring that these points then correspond to the fixing points located at the back of the cooker hood.
- Perform 4 drill holes of Ø 6 mm.
- Insert 4 wall screw anchors and two screws in the upper drill holes on which to affix the cooker hood.
- Hang the cooker hood on the wall.

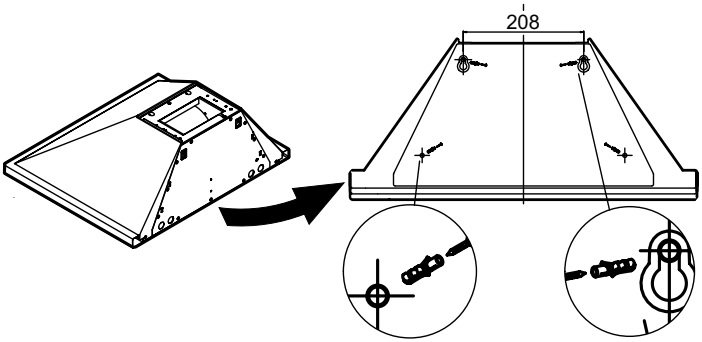

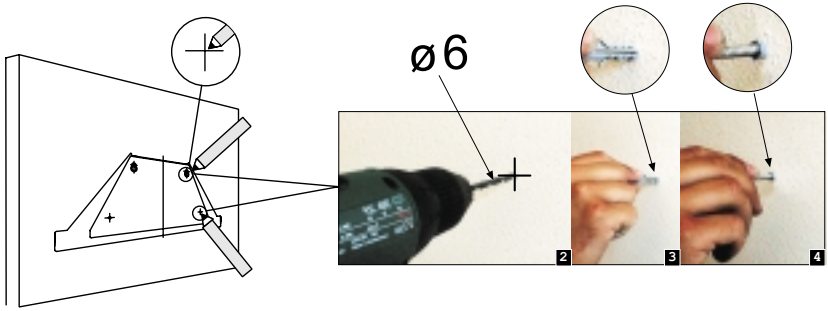

- Remove the grease filters, and permanently affix the cooker hood to the wall from inside the cooker hood using 2 screws.

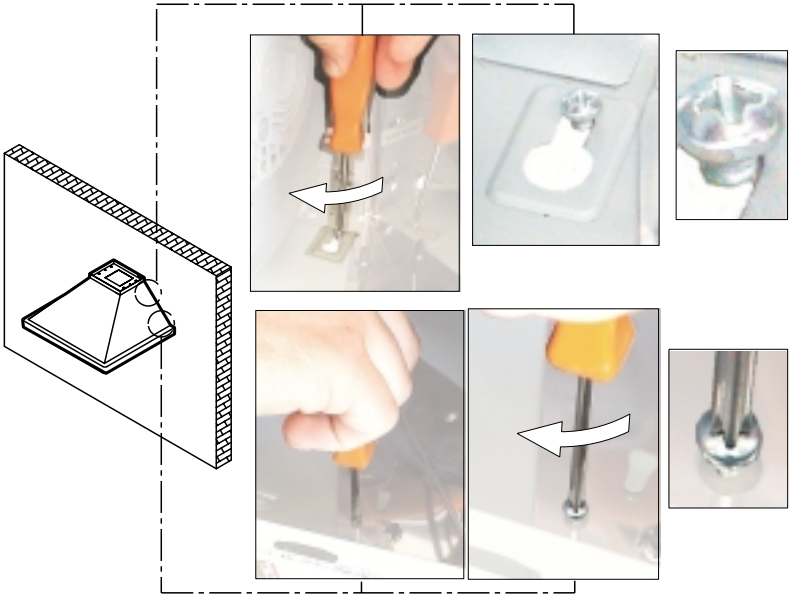

- Only for Suction version:
  Apply the exhaust ring to the exit perforation of the cooker hood and fix it with 2 screws.
  Apply an exhaust pipe to the connection ring which is long enough to reach the exterior.
- Carry out all the electrical connections.

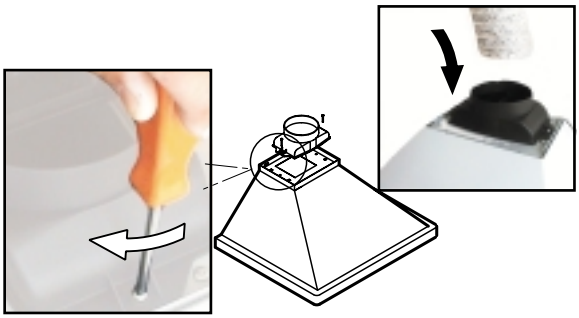

- Lean the chimney flue on top of the cooker hood, slide out the upper section until it reaches the ceiling and mark the sides on the wall with a pencil.

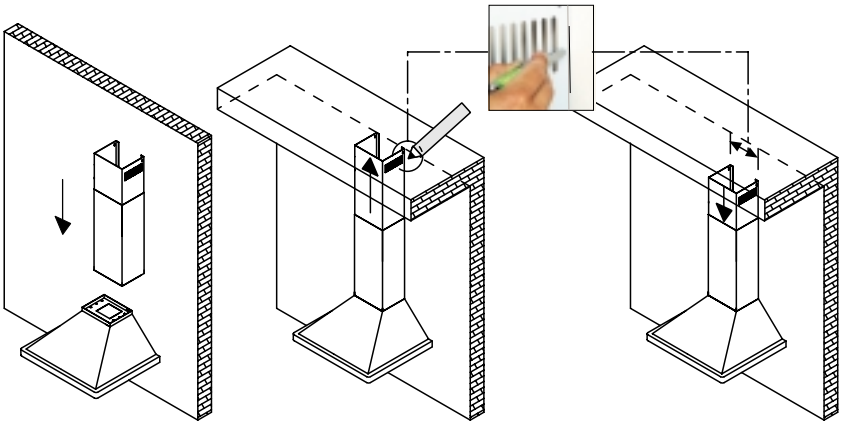

- Fix the chimney flue support in proximity to the ceiling with 2 screws and screw anchors (check that the chimney flue support is centered in respect to the 2 lines previously marked on the wall).

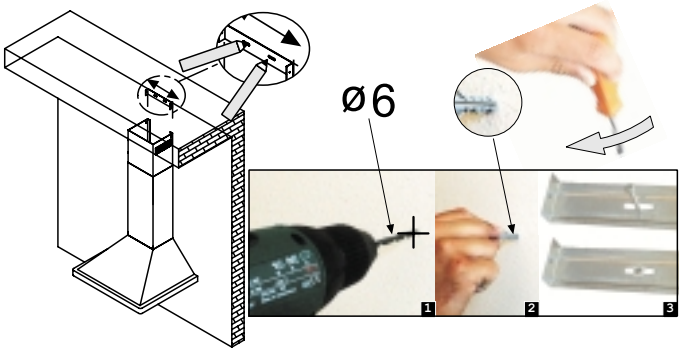

- Fix the chimney with 2 screws in the upper section and 2 screws in the lower section (2 per side).

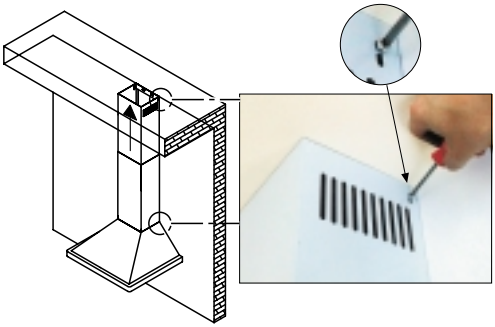

From the Electrolux Group. The world´s No. 1 choice.

The Electrolux Group is the world´s largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

LI119A Ed. 12/02
8028007020_1

Moffat
55 - 77 High Street - Slough
BERKSHIRE SL1 1DZ
© Electrolux plc 2003